

## FANUC

### VŘETENOVÉ PŘÍSTROJE / HAUPTSPINDELGERÄTE

A06B-6044-H010	A06B-6055-H103	A06B-6055-H112
A06B-6055-H206	A06B-6059-H206	A06B-6059-H208
A06B-6059-H208#H512	A06B-6059-H208#H513	A06B-6059-H208#H524
A06B-6059-H208#H525	A06B-6059-H208#H534	A06B-6059-H208#H543
A06B-6059-H208#H552	A06B-6059-H208#H565	A06B-6059-H208#H576
A06B-6059-H208#H583	A06B-6078-H206	A06B-6078-H206#H500
A06B-6078-H206#H501	A06B-6078-H206#H508	A06B-6078-H211
A06B-6078-H211#H500	A06B-6078-H211#H501	A06B-6078-H211#H508
A06B-6082-H211	A06B-6082-H211#H510	A06B-6082-H211#H511
A06B-6082-H211#H512	A06B-6102-H111	A06B-6102-H111#H520
A06B-6102-H122	A06B-6102-H122#H520	A06B-6102-H211
A06B-6102-H211#H520		

### SERVO-REGULÁTOR / SERVOREGLER

A06B-6050-H102	A06B-6050-H103	A06B-6050-H104
A06B-6050-H201	A06B-6050-H202	A06B-6050-H203
A06B-6057-H001	A06B-6057-H007	A06B-6058-H334
A06B-6066-H244	A06B-6066-H234	A06B-6089-H105
A06B-6089-H206	A06B-6089-H208	A06B-6079-H105
A06B-6079-H105#CE	A06B-6079-H105#R	A06B-6079-H105#CS
A06B-6079-H105#EM	A06B-6079-H206#CE	A06B-6079-H206#CS
A06B-6079-H206#EM	A06B-6079-H206#R	A06B-6079-H208
A06B-6079-H208#CE	A06B-6096-H101	A06B-6096-H101#H
A06B-6096-H101#HR	A06B-6096-H101#cut	A06B-6096-H102
A06B-6096-H102#H	A06B-6096-H102#HR	A06B-6096-H103
A06B-6096-H103#H	A06B-6096-H103#HR	A06B-6096-H116#H
A06B-6096-H116#HR	A06B-6096-H121	A06B-6096-H121#H
A06B-6096-H121#HR	A06B-6096-H122	A06B-6096-H122#H
A06B-6096-H122#HR	A06B-6096-H150	A06B-6096-H150#H
A06B-6096-H150#HR	A06B-6096-H201	A06B-6096-H201#H



SEZNAM KOMPONENTŮ A NÁHRADNÍCH DÍLŮ /  
KOMPONENTEN UND ERSATZTEILLISTE  
PRODEJ-VÝMĚNA-OPRAVA / VERKAUF-AUSTAUSCH-REPARATUR

## FANUC

### SERVO-REGULÁTOR / SERVOREGLER

A06B-6096-H201#R	A06B-6096-H201#HR	A06B-6096-H201#cut
A06B-6096-H202	A06B-6096-H202#H	A06B-6096-H202#HR
A06B-6096-H202#cut	A06B-6096-H203	A06B-6096-H203#H
A06B-6096-H203#HR	A06B-6096-H203#R	A06B-6096-H203#cut
A06B-6096-H204	A06B-6096-H204#H	A06B-6096-H204#HR
A06B-6096-H205	A06B-6096-H205#H	A06B-6096-H205#HR
A06B-6096-H206	A06B-6096-H206#H	A06B-6096-H206#HR
A06B-6096-H207	A06B-6096-H207#H	A06B-6096-H207#HR
A06B-6096-H208	A06B-6096-H208#H	A06B-6096-H208#HR
A06B-6096-H208#cut	A06B-6096-H209	A06B-6096-H209#H
A06B-6096-H209#HR	A06B-6096-H218	A06B-6096-H218#H
A06B-6096-H218#HR	A06B-6093-H101	A06B-6093-H101#R
A06B-6093-H101#RS	A06B-6093-H111	A06B-6093-H151
A06B-6124-H104	A06B-6124-H205	A06B-6124-H206
A06B-6127-H103	A06B-6077-H115	A06B-6077-H106
A06B-6077-H111	A06B-6077-H126	A06B-6081-H103
A06B-6081-H101	A06B-6081-H106	A06B-6110-H026
A06B-6110-H030	A06B-6120-H030	A06B-6120-H045
A06B-6140-H026	A16B-1212-0100-01	A16B-1210-0510-01
A16B-1211-0850-01	A16B-1212-0110-01	A06B-6077-H115#R
A06B-6077-H111#R	A06B-6077-H126#R	A06B-6081-H103#R
A06B-6081-H101#R	A06B-6081-H106#R	A16B-1212-0531
A16B-1212-0901	A20B-1001-0160	

### MONITOR NÁHRADA ZA 9" CRT OBRAZOVKY / ERSATZMONITOR FÜR 9" CRT MONITOR

FANUC SERIE 0	FANUC SERIE 0-B	FANUC SERIE 0M	FANUC SERIE 0T
FANUC SERIE 6	FANUC SERIE 6B	FANUC SERIE 6BT	FANUC SERIE 6M
FANUC SERIE 6MB	FANUC SERIE 6T	FANUC SERIE 11	FANUC SERIE 11M
FANUC SERIE 11T	FANUC SERIE 15-M	FANUC SERIE 16	FANUC SERIE 18
FANUC SERIE 20-21	FANUC SERIE Power Mate		FANUC SERIE MF-T8



## FANUC

### MONITOR NÁHRADA ZA 9“ TFT-LCD DISPLAY / ERSATZMONITOR FÜR 9“ TFT-LCD DISPLAY

FANUC SERIE 16-L

### MONITOR NÁHRADA ZA 8.4“ TFT-LCD DISPLAY / ERSATZMONITOR FÜR 8.4“ TFT-LCD DISPLAY

LCD/MDI Unit A02B-0222-C136/MAR / Serie 18-M

LCD/MDI Unit A02B-0120-C131/TAR

LCD/MDI Unit A02B-0120-C131/TAS / Serie 18-T

### MONITOR NÁHRADA ZA 9.5“ TFT-LCD DISPLAY / ERSATZMONITOR FÜR 9.5“ TFT-LCD DISPLAY

LCD Unit A02B-0163-C332 / SERIE 15-M

LCD/MDI Unit A02B-0200-C061

LCD/MDI Unit A02B-0200-C061/MB

LCD/MDI Unit A02B-0200-C061/TBS / SERIE 16-M

### MONITOR NÁHRADA ZA 9.4“ / 10.4“ TFT-LCD DISPLAY / ERSATZMONITOR FÜR 9.4“ / 10.4“ TFT-LCD DISPLAY

LCD/MDI Unit A02B-0120-C061/TA,

LCD/MDI Unit A02B-0120-C061/WA / Serie 16-TT

LCD Unit A02B-0200-C115 na MSC 518 FANUC

### MONITOR NÁHRADA ZA 12“ / 14“ CRT OBRAZOVKY / ERSATZMONITOR FÜR 12“ / 14“ CRT MONITOR

FANUC SERIE 3

FANUC SERIE 6

FANUC SERIE 10

FANUC SERIE 11

FANUC SERIE 15

FANUC SERIE 16

FANUC SERIE 18

FANUC SERIE 20